

Smart Watch Phone

User Guide

Please read the manual before use.

1. Safety Warning


- ◆ The watch should be charging 2 hours at least before use.

Security Code

- ◆ The original code is 1122, this code can prevent your watch in use by others without your permission.
- ◆ Please change the original code to insure your personal information safe.

2. Product details:

2.1 Product details

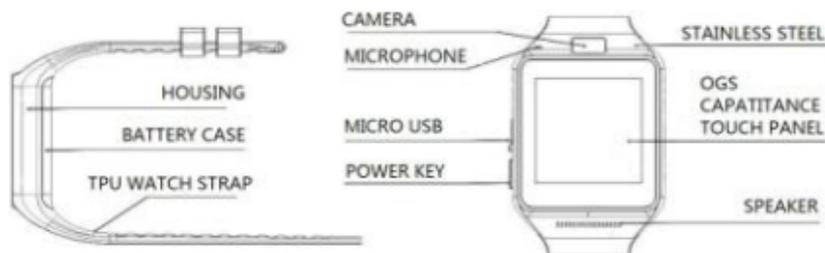

Power button: Power On/Off ; Awaken/turn off screen ; Back to main menu


USB port: Charging/Data ;

Touch screen: each function (main menu) will be shown and displayed on capacitive touch screen.

2.2 Products quick into

You can enter into next page by sliding screen to the left, and return to last page by sliding screen right; enter into the notice board after sliding from up to down, and return to main mean from down to up. It is will be in mistake for a click if the drag distance too short.

2.3 Clock Display

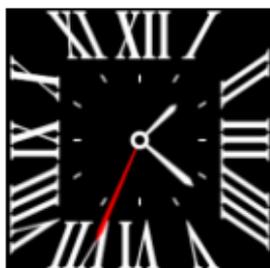

Setting method :

Method 1: Power on, when the phone is in clock mode, please click middle screen and set different clock interfaces if you like.

Method 2: Power on, Main menu: setting--phone setting--standby menu display -- unlock selection, choose the clock mode if you like.

2.4 Product theme settings



Florid



Colorful



Classics

Setting method:

Main menu : Theme setting, choose the theme if you like.

2. Product quick use

3.1 Download the Sync software.

Scan QR code , down load the APP which can match your android phone. This APP only use for the Sync between watch and phone, will not take your phone GPRS.



If you already download the related softwares, please check the version and use the newest related softwares in order to ensure all function normal use. Please update the software when it has new one.


3.2 Install and use the Sync software

Android Application installation :

Please install the android application in your smart phone. You can storage it into your phone memory or install by Sync assistant.

Android application usage (already installed)

(Smart phone) Setting -- Accessibility—Enter into Bluetooth notice(service), enable this service. (please choose “sure” when shown a warning notices) the application runs on the background automatically and sync function will be switched on as below:

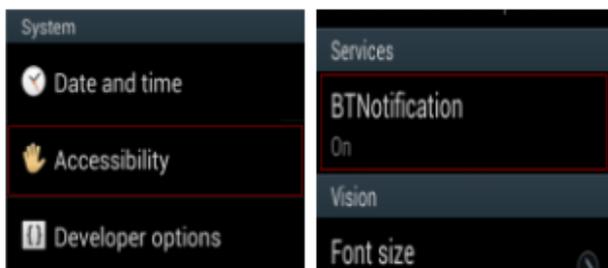

Click the Bluetooth notices and choose the Notification service,select your Personal or System application in Notify application.

Telephone service is including SMS, incoming call and seek watch.

Notice :

Please don't shut the Bluetooth notify service when you are clearing software by background or close background application software.It will affect the Sync function between watch and phone if shut it.

3.3 Bluetooth Connection and Sync function

3.3.1 From phone to watch

Phone setting—turn on the Bluetooth --search for devices , please click pair devices when found GV08,and also choose "yes "in your mobile phone, paired done.

Please choose "sure" when there is phone book request , meanwhile you'd better choose" no remind again", this is convenience when you connect next time(without remind again),

Notice: The Sync software can open in sync APP already installed and Accessibility, the mobile will show Bluetooth connected done after 2-5min;the watch will inform you the time of Sync with phone, than the Sync switched on. The message will sync to you watch when it incoming to mobile.

3.3.2 From watch to phone

BT Dialer on GV08—search new device—found your smart watch (such as s9500) -- connect. The processes of next are same with 3.3.1

3.4 Base function

3.4.1 Message

Sync phone or watch message.

3.4.2 Bluetooth

Sets the Bluetooth status, turn on/off.

3.4.3 Calls records

You can check your phone call records after you connect with the Bluetooth.

Shown all records including miss call, dialed calls and receive call; You can check the date, time and phone number of the miss call after you choose it, but only can call this number.

3.4.4 BT dialer

Paired devices from smart watch

3.4.5 Remote notifier

When there is SMS, incoming messages from QQ and other applications on the connected phone, the watch phone will alert you to read them.

3.4.6 Remote cameras

Use phone camera take photos, but remote by watch, its need switch on the camera of phone in advance.

3.4.7 Anti lost

Watch seek phone, or phone seek watch.

3.4.8 Setting

Notice: sets clocks display and theme in phone setting. In the security Settings, **the safe code is 1122.**

3.4.9 Pedometer

It can be adopted as a tool to avoid insufficient or excessive exercise by measuring calories or calories consumption based on collected data, such as number of steps, distance, speed, time, etc., to control exercise.

If you want return to main menu but keep pedometer during the exercise, please press the power button.

3.4.10 Sleep monitor

Show your sleep quality base on your sleep times.

3.4.11 Sedentary remind

You can set a time to remind you up to do some exercise, we suggest you this time could be one hours.

3.4.12 Quick response

It can download sync software when scan the quick response ,if there is a new version need to update, please contact with our servicer, our company will provide a new link for your download.

3.4.13 Smart search

Search information about watch

3.4.14 Alarm

3.4.15 Calendar

3.4.16 Calculator

3.4.17 Profiles

3.4.18 File manager

3.4.19 Audio player

Can play music from local or smart phone after connect with Bluetooth.

3.4.20 Theme setting

3.4.21 Camera

3.4.22 Video recorder

3.4.23 Image viewer

3.4.24 Video player

3.4.25 Sounder recorder

3.4.26 Phone QQ

QQ need your phone has SIM card and can surf the Internet.

3.4.27 Browser

Browser need your phone has SIM card and can surf the Internet.

3.4.28 SIM tool

4. Notice

4.1 Full charge before use, the charge time need 1-2 hours.

4.2 Use the accessories cable and charger, or your android phone accessories.

4.3 Bluetooth will disconnect when exceed the distances, after switch on the Anti lost, the smart search function can't be use before reconnect with Bluetooth.

4.4 Please reconnect with BT if it's disconnected occasionally (please Manual connect if the Bluetooth disconnect over 5 minutes) .Please agree the phone book Sync otherwise there is no called phone book.

4.5 When playing the music, some of music's name can shown and some can't, it is normal, because android phone are differences.

5. Common trouble shooting

Please refer below key function for any problems with the watch,if the problem is still unsolved,please contact with our dealer or serviceman appointed.

5.1 Unable to switch on

The time of press the power button too short,please keep it more than 3 seconds.

Low power,please charge it.

5.2 Shut down automaticly

Low power, please charge the watch

5.3 Using time too short.

Battery is not full,please make sure it is full power(full charge need 2hours at least).

During the use of SIM card,the power will be run off soon if the signal too poor.

5.4 Unable to charge.

The battery's life will be reduce after few years,please check if the battery are work.

Change a new charger if it is unworkable.

Please check the USB slot connecting good,if no,please try again.

5.5 No caller's name when incoming call

Forgot to choose upload the phone book when connected with BT,or unselected keep upload the phone book.

Forgot to sync the phone book when reconnected,please pair the device and connect BT again.

5.6 Bad phone call voice.

Watch and phone are separated too far,please be more close ;Bad signal of BT.

Bad signal of your own phone call place,please change a more better place for phone call.

Smart Watch Phone

Guía del usuario

Por favor, lea el manual antes de su uso.

1. Advertencia de seguridad


- ◆ El reloj debe cargando 2 horas por lo menos antes de su uso.

Código de seguridad:

- ◆ El código original es 1122, este código puede evitar que su reloj sea usado por terceros sin su autorización.
- ◆ Por favor, cambie el código original para asegurar su información personal segura

2.Product details:

2.1 Datos del producto

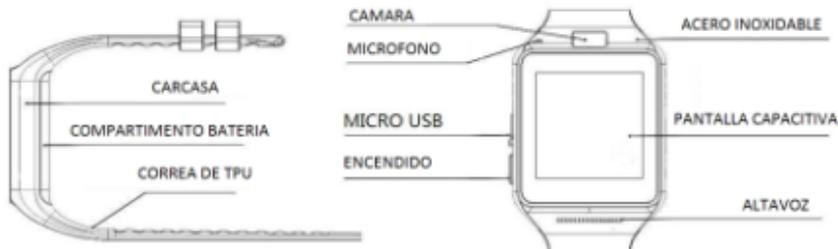

Botón de encendido: Encendido / apagado reloj, apagado/encendido de la pantalla; Volver al menú principal


Puerto USB: Carga / Datos;

Pantalla táctil: mostrará la función seleccionada (menú principal) y se visualiza en la pantalla táctil capacitiva.

2.2 Menus de entrada rapida

Puede entrar en la siguiente página de pantalla deslizando hacia la izquierda, y volver a la última página deslizando la pantalla derecha: y entrar en el tablón de anuncios después de deslizar de arriba a abajo, y regresa al medio principal de abajo hacia arriba. No funcionara si la distancia deslizada es demasiado corta

2.3 Pantalla de Reloj

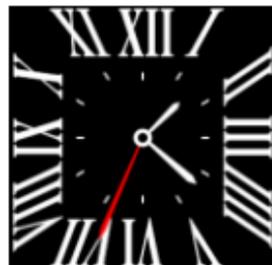

Método de ajuste :

Método 1: Encendido, cuando el teléfono esta en el modo de reloj, haga clic en la pantalla y seleccione el modelo de reloj deseado

Método 2, Menú principal: ajuste - configuración del teléfono - pantalla de bloqueo - desbloquear la selección, seleccionar el modo de reloj que desee.

2.4 configuración del tema



Florido



Colorido



Clásicos

Método de ajuste:

Menú principal: Configuración de tema, elegir el tema deseado.

3. Uso rápido del producto

3.1 Descarga el software de sincronización.

Escanear Código QR , descargar la APP que coincida con su móvil android. Esta aplicación se utilizara sólo para la sincronización entre el reloj y el teléfono, no emplea GPRS teléfono.



Si ya ha descargado el software relacionado, por favor, compruebe la

versión y el uso con el fin asegurarse que funcione correctamente. Por favor, actualice el software siempre a la última versión


3.2 Instalación y utilización del software de sincronización

Instalación de la aplicación Android:

Instalar la aplicación de Android en su Smartphone.

Uso de aplicaciones de Android (ya instalado)

(Smart phone) Ajuste -- Accesibilidad -- entra notificación de Bluetooth (servicio), activar el servicio la aplicación se ejecuta en el fondo automáticamente y la función de sincronización activa como figura a continuación:

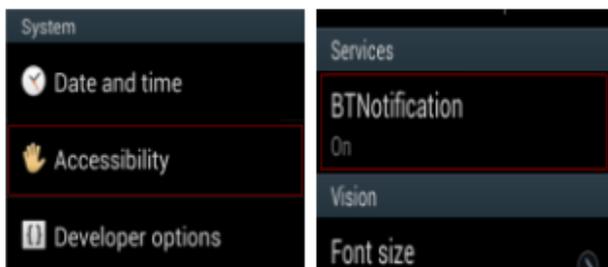

Haga clic en los avisos Bluetooth y elegir el servicio de notificación, seleccione la aplicación de Personal o Sistema de Notificar a la aplicación.

El servicio telefónico está incluyendo SMS, llamadas entrantes y buscar el reloj.

Nota:

Por favor, no cierre el servicio de notificaciones Bluetooth ya que afectaría a la función de sincronización entre el reloj y el teléfono si la cerró.

3.3 Conexión Bluetooth y la función de sincronización

3.3.1 Desde móvil a reloj

Ponga el reloj en función de búsqueda de Bluetooth, haga lo mismo en su móvil, cuando encuentre en el móvil GV08, realice el emparejamiento.

Por favor seleccione "sure" cuando desee acceso a la lista de contactos, o

"not remind again", para conectarse la próxima vez sin recordar el dispositivo

Aviso: El software de sincronización mostrará que el Bluetooth esta conectado, el reloj le informará el momento de la sincronización con el teléfono

3.3.2 Desde reloj a móvil

BT Dialer de GV08—buscar nuevo dispositivo—encontró su reloj-inteligente (como s9500) -- conectar. Los procesos siguiente son los mismos con 3.3.1

3.4 Función Base

3.4.1 Mensaje

Sincronizar llamadas o mensajes.

3.4.2 Bluetooth

Establece el estado de Bluetooth, encender / apagar

3.4.3 Historias de llamadas

Puede revisar sus registros de llamadas telefónicas después de que se conecte con el Bluetooth.

Se muestra todos los registros de llamadas incluyendo, las llamadas realizadas y recibidas; Puede comprobar la fecha, hora y número de teléfono de la llamada

3.4.4 BT marcador

Dispositivos vinculados al reloj inteligente

3.4.5 notificador remoto

Cuando hay SMS, los mensajes entrantes de QQ y otras aplicaciones en el teléfono conectado, el teléfono reloj le avisará para leerlos.

3.4.6 cámaras remotas

Emplea la cámara del teléfono tomar fotos

3.4.7 Anti perdida

Reloj busca teléfono o teléfono busca reloj, cuando uno de ellos se separa una distancia de aprox 10m el reloj comenzara a emitir una señal sonora

3.4.8 Ajuste

Aviso: Establece la pantalla del reloj y el tema en la configuración del teléfono. En la configuración desseguridad, el código de seguridad es 1122.

3.4.9 Podómetro

Puede ser adoptado como una herramienta para evitar el ejercicio insuficiente o excesivo mediante la medición de calorías o calorías consumo basado en los datos recogidos, como el número de pasos, distancia, velocidad, tiempo, etc., para controlar el ejercicio.

Si desea volver al menú principal, pero mantener podómetro durante el ejercicio, por favor, pulse el botón de encendido.

3.4.10 Monitor de sueño

Muestra la calidad del sueño en sus horas de sueño y movimientos durante el sueño

3.4.11 Recordatorio Sedentario

Se puede establecer un tiempo para recordarle hacer algo de ejercicio

3.4.12 Respuesta rápida

Puede descargar nuevo software de sincronización mediante el uso del escaneo de respuesta rápida, si hay una nueva versión esta le aparecera

3.4.13 Smart search

Busca información del reloj

3.4.14 Alarma

3.4.15 Calendario

3.4.16 Calculadora

3.4.17 Perfiles

3.4.18 organizador de archivos

3.4.19 Reproductor de audio

Puede reproducir música desde el teléfono inteligente local o después de conectar con Bluetooth.

3.4.20 Selección de tema

3.4.21 Camara

3.4.22 Grabadora de vídeo

3.4.23 Visor de imágenes

3.4.24 Reproductor de video

3.4.25 Grabadora

3.4.26 QQ

QQ necesitará que su teléfono tenga una tarjeta SIM y pueda navegar por Internet.

3.4.27 Navegador

Navegador necesitará que su teléfono tenga una tarjeta SIM y pueda navegar por Internet.

3.4.28 SIM herramienta

4. Aviso

4.1 realice la carga completa antes de su uso, el tiempo de carga varia entre 1-2 horas.

4.2 Utilice el cable de accesorios y cargador para teléfonos android

4.3 El Bluetooth se interrumpe al superar varios metros después podría activarse la función antiperdida si la tiene conectada.

4.4 Por favor, vuelva a conectar con BT en caso de desconexión

4.5 Durante la reproducción de música, algunos títulos se mostraran y otros non, esto es normal y depende de los teléfonos android

5. Solución de problemas comunes

Por favor, consulte a continuación la solución a los problemas comunes, si el problema sigue sin resolverse, póngase en contacto con nuestro distribuidor o técnico de servicio designado.

5.1 No se puede encender

El tiempo de presión del botón de encendido es demasiado corto, por favor, presione al menos durante 3 segundos.

Batería baja, por favor realice la carga completa

5.2 Se apagar automáticamente

Batería baja, por favor realice la carga completa

5.3 Tiempo de uso demasiado corto.

La batería no está llena, por favor asegúrese de cargar la batería (la carga completa necesita al menos 2horas).

Durante el uso de la tarjeta SIM, la batería se descargara mas rápida si la señal es baja.

5.4 No se pueden cargar.

La vida de la batería se reduce después de unos años, por favor, compruebe que la batería esta aun operativa

Cambiar el cargador

Por favor, compruebe que la ranura USB esta bien conectada, si no, por favor, inténtelo de nuevo.

5.5 El nombre de ninguna persona que llama aparece en la llamada entrante

Se olvidó de elegir cargar el listado de teléfono cuando se conecta por BT

Se olvidó de sincronizar la guía telefónica cuando se vuelve a conectar, por favor emparejar el dispositivo y conecte de nuevo BT.

5.6 Voz entrecortada en una llamada telefónica.

El Reloj y el teléfono se han separado demasiado, o existe mala señal de BT.

Poca cobertura en la llamada telefónica, por favor busque un lugar con mejor cobertura